Hoshizaki America, Inc.

Crescent Cube Icemaker/Dispenser

Models
DKM-500BAH
DKM-500BWH



PARTS LIST

www.hoshizaki.com





Number: 71253 Issued: 11-2-2001 Revised: 2-21-2011

CONTENTS

Auxiliary Codes	3
Note About Ordering Parts	3
Material Abbreviations	4
A. Ice Dispenser Assembly	5
DKM-500BAH	5
DKM-500BWH	
B. Refrigeration Unit	11
DKM-500BAH	11
DKM-500BWH	17
C. Water Circuit	21
D. Control Box Assembly	24
DKM-500BAH	24
DKM-500BWH	
E. Bin Assembly	28
F. Bin Cover Assembly	30
G. Front Panel Assembly	31
H. Label Location	32
J. Fan Motor Assembly	
DKM-500BAH	34
K. Mechanism Assembly	35
L. Solenoid Assembly	37
M. Shutter Assembly	39
N. Gear Motor Assembly	40
P. Accessories and Packaging	41

Auxiliary Codes

DKM-500BAH	R-0 R-1 S-0 S-1 T-0 T-1 U-0 U-1 V-5 V-6 V-7 A-5 A-6	January 2006 April 2006 January 2007 May 2007 March 2008 July 2008 January 2009 October 2009 January 2010 February 2010 July 2010 August 2010 February 2011 March 2011
DKM-500BWH	T-0 T-1 U-0 U-1 V-0 V-5 V-6 V-7 A-5	February 2008 August 2008 January 2009 August 2009 January 2010 February 2010 July 2010 October 2010 January 2011

Auxiliary Code Breakdown

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

March 2011

A-6

Note About Ordering Parts

Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

Material Abbreviations

ALUMINUM

AL = Aluminum

COPPER

CU = Copper

PLASTIC

ABS = Acrylonitrile -butadiene-styrene

AC = Polyacetal

EVA = Ethylene vinyl acetate
PA = Polyamide = Nylon
PC = Polycarbonate
PE = Polyethylene
PES = Polyester

PETP = Polyethylene terephthalate = Tetlon

PP = Polypropylene PS = Polystyrene

PTFE = Polytetrafluoroethylene = Teflon

PUR = Polyurethane PVC = Polyvinyl chloride

RUBBER


VN = Vinyl Nitrile EPDM = EP rubber

NBR = Nitrile butadiene rubber

NR = Natural rubber
NP = Neoprene
SI.R = Silicone rubber
SY.R = Synthetic rubber
EPH = Epichlorohydrin

STEEL

GS = Galvanized steel
SS = Stainless steel
PS = Plated steel
PAS = Primed steel

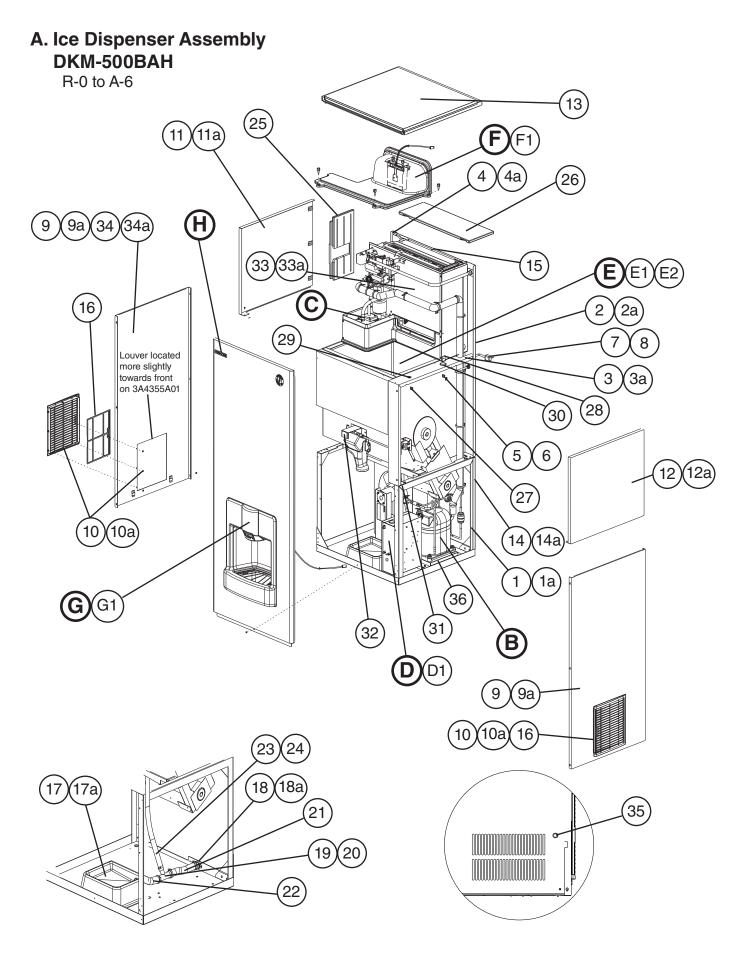

Index No. Description B Refrigeration Unit C Water Circuit D Control Box Assembly D1 FT Screw E Bin Assembly	Material or Model Number - -	Part Number 1A1071A01 1A1071A02 1A2041A01 2A3808A01 2A5136A01 2A5136A03	R-0 R-1 1	S-0 S-1	T-0 1	T-1 U-0	red Nu U-1 to V-6	umber V-7 A-5	A-6	
No. Description B Refrigeration Unit C Water Circuit D Control Box Assembly D1 FT Screw	Model Number	1A1071A01 1A1071A02 1A2041A01 2A3808A01 2A5136A01	R-1	S-1	T-0	T-1 U-0	U-1 to	V-7		
No. Description B Refrigeration Unit C Water Circuit D Control Box Assembly D1 FT Screw	Model Number	1A1071A01 1A1071A02 1A2041A01 2A3808A01 2A5136A01	R-1	S-1	_	U-0			A-6	
B Refrigeration Unit C Water Circuit D Control Box Assembly D1 FT Screw	-	1A1071A01 1A1071A02 1A2041A01 2A3808A01 2A5136A01	1		_		V-6	A-5	A-6	1
C Water Circuit D Control Box Assembly D1 FT Screw	-	1A1071A02 1A2041A01 2A3808A01 2A5136A01		1	1	1			.	Щ.
D Control Box Assembly D1 FT Screw	-	1A2041A01 2A3808A01 2A5136A01	1				-			<u> </u>
D Control Box Assembly D1 FT Screw	-	2A3808A01 2A5136A01	1				1	-		
D Control Box Assembly D1 FT Screw	-	2A5136A01	I 4					1	1	
D1 FT Screw	-		'	1	1	1	-			
D1 FT Screw	-	245136403					1	-		
D1 FT Screw	-	2/10/100/100						1	1	
		2A3608A01	1	1	1	1	-			
		2A3608A02					1	-		
		2A6095A02						1	1	$oxed{oxed}$
E Bin Assembly	4×8, SS	7F32-0408	4	4	4	4	4	4	4	
	-	2A3581A01	1	1	-					
		2A3581A02			1	1	1	1	-	
		2A3581A03							1	
E1 Hex Bolt w/Washer (LF)	8×20, SS	7B0230820	4	4	4	4	4	4	4	
E2 FT Screw	4×8, SS	7F32-0408	3	3	3	3	3	3	5	
F Bin Cover Assembly	-	3A3877A01	1	1	1	1	1	1	1	
F1 Thumbscrew	ABS, SS	434168G02	3	3	3	3	3	3	3	
G Front Panel Assembly	-	3A3582A01	1	1	1	1	1	1	1	
G1 FT Screw	4×8, SS	7F32-0408	1	1	1	1	1	1	1	
H Label Location	-	2A3768A01	1	1	1	1	1	-		
		2A6099A03						1	1	
1 Frame	-	1A1177G01	1	1	1	1	_			
Frame (includes item 36)		1A1177G02	<u> </u>	•	•		1	1	1	\vdash
1a FT Screw	4×8, SS	7F32-0408	3	3	3	3	3	3	3	\vdash
2 Rear Frame (A)	-	2A3527-01	1	1	1	1	1	1	1	
2a FT Screw	4×8, SS	7F32-0408	7	7	7	7	7	7	7	
3 Side Frame (R)	-	1A1075-01	1	1	1	1	-	·	·	
		1A1878-01	<u> </u>	i i	i i	<u> </u>	1	1	1	\vdash
3a FT Screw	4×8, SS	7F32-0408	5	5	5	5	5	5	5	\vdash
4 Side Frame (L)	-	3A3584-01	1	1	1	1	1	1	1	\vdash
4a FT Screw	4×8, SS	7F32-0408	4	4	4	4	4	4	4	
5 Square Washer	Brass	433537-02	1	1	1	1	1	1	1	
6 Ground Screw	-	433304-02	1	1	1	1	1	1	1	\vdash
7 Bushing	SR-7K-2	420472-02	1	1	1	1	1	1	1	\vdash
8 Power Supply Cord	-	4A0520-01	1	1	1	1	1	1	1	\vdash
9 Side Panel (includes 1 of	item -	3A3744A01	2	-				<u> </u>	<u> </u>	\vdash
10 and 3 of item 10a)		3,10,11,101	_	1	1	1	1	1	1	
9a FT Screw	4×8, SS	7F32-0408	11	-						
	-,			6	6	6	6	6	6	
10 Louver		1A0547-01	2	2	2	2	2	2	2	
10a Push Retainer		4A2414-01	6	6	6	6	6	6	6	
11 Side Panel-(L1)	SS	2A3532G01	1	1	1	1	1	1	1	
11a FT Screw	4×8, SS	7F32-0408	1	1	1	1	1	1	1	
12 Side Panel-(R1)	SS	2A3529G01	1	1	1	1	1	1	1	
	4×8, SS	7F32-0408	1	1	1	1	1	1	1	
12a FT Screw	1 1/10, 00									1

							Requi	red No	umber		
								U-1			
Index		Material or		R-0	S-0		T-1	to	V-7		
No.	Description	Model Number	Part Number	R-1	S-1	T-0	U-0	V-6	A-5	A-6	
14	Rear Panel	-	3A3586-01	1	1	1	1	1	1	1	
14a	FT Screw	4×8, SS	7F32-0408	4	4	4	4	4	4	4	
15	Hook	-	4A3984-01	1	1	1	1	1	1	1	
16	Air Filter	-	2A2062G01	2	2	2	2	2	2	2	
17	Drain Pan Assembly	-	2A3522G01	1	1	1	1	1	1	1	
17a	FT Screw	4×8, SS	7F32-0408	4	4	4	4	4	4	4	
18	Fitting-Drain	-	438729-01	1	1	1	1	1	1	1	
18a	Truss Head Screw	5×8, SS	7C32-0508	2	2	2	2	2	2	2	
19	Tee	PVC	4A0525-05	1	1	1	1	1	1	1	
20	Hose Clamp	2346 HC 1250	4A2017-03	4	4	4	4	4	4	4	
21	Vinyl Hose-Clear	L=195	4A0658L01	1	1	1	1	1	1	1	
22	Vinyl Hose-Clear	L=170	4A0658L01	1	-						
		L=192	1		1	1	1	1	1	1	
23	Vinyl Hose	L=550	7716-2025	1	1	1	1	1	1	1	
24	Hose Clamp	2338 HC 953	4A2017-01	2	2	2	2	2	2	2	Г
25	Insulation Panel	-	2A0664G01	1	1	1	1	1	1	1	Г
26	Top Insulation	-	215730G01	1	1	1	1	1	1	1	Т
27	Wire Saddle	VWS4274-C	4A0338-03	5	5	5	5	5	5	5	Г
28	Evaporator Bracket	-	4A4068-01	1	1	1	1	-			Т
29	Bushing	OCB-875	428394-04	1	1	1	1	1	1	1	
30	Bushing	SB-1500-21	420470-06	1	1	1	1	1	1	1	
31	Rubber Gasket	L=50	4A0662L01	1	1	1	1	1	1	1	
32	Front Panel Support	-	4A4133G01	1	1	1	1	1	1	1	
33	Evaporator Case	-	2A3586G01	1	1	1	1	1	1	1	
33a	FT Screw	4×8, SS	7F32-0408	4	4	4	4	4	4	4	
34	Side Panel (L) (includes 1 of item 10 and 3 of item 10a)	-	3A4355A01		1	1	1	1	1	1	
34a	FT Screw	4×8, SS	7F32-0408		5	5	5	5	5	5	
35	Locking Hole Plug	-	4A0586-04				1	1	1	1	
36	Compressor Base Assembly	-	4A4835G01					1	1	1	


A. Ice Dispenser Assembly DKM-500BWH T-0 to A-6 (13) (11a) (25) 11 (26) (4a) 9 9a (15) (10a 10 **E**)(E1)(E2) 2 **(C** 8 (29 3 (3a) 0 28) 30 (12)(12a) 5 27 14 (14a) 1a 1 33 **(G)**(G1) 16 (D1 9 9a 23 (24 (18a 18 17 (21) 32) 19 (20) 22 8

	. Ice Dispenser Assembly	Model: DKM-500BV	· ·				Requi	ired Nu	umber		
						11.4	V-6				
Index		Material or			T-1	U-1 to	to				
No.	Description	Model Number	Part Number	T-0	U-0	V-5	A-5	A-6			
В	Refrigeration Unit	-	1A1480A01	1	1	-					
			1A1480A02			1	-				
			1A2086A01				1	1			
С	Water Circuit	-	2A3808A02	1	1	-					
			2A5136A02			1	1	1			
D	Control Box Assembly	-	2A4574A01	1	1	-					
			2A4574A02			1	-				
			2A6214A01				1	1			
D1	FT Screw	4×8, SS	7F32-0408	4	4	4	4	4			
Ε	Bin Assembly	-	2A3581A02	1	1	1	1	-			
			2A3581A03					1			
E1	Hex Bolt w/Washer (LF)	8×20, SS	7B0230820	4	4	4	4	4			
E2	FT Screw	4×8, SS	7F32-0408	3	3	3	3	5			
F	Bin Cover Assembly	-	3A3877A01	1	1	1	1	1			
F1	Thumbscrew	ABS, SS	434168G02	3	3	3	3	3			
G	Front Panel Assembly	-	3A3582A01	1	1	1	1	1			
G1	FT Screw	4×8, SS	7F32-0408	1	1	1	1	1			
Н	Label Location	-	2A3768A02	1	1	1	-				
			2A6099A02				1	1			
1	Frame		1A1177G01	1	1	-					
	Frame (includes item 33)		1A1177G02			1	1	1			
1a	FT Screw	4×8, SS	7F32-0408	3	3	3	3	3			
2	Rear Frame (A)	-	2A3527-01	1	1	1	1	1			
2a	FT Screw	4×8, SS	7F32-0408	7	7	7	7	7			
3	Side Frame (R)	-	1A1075-01	1	1	-					
			1A1878-01			1	1	1			
3a	FT Screw	4×8, SS	7F32-0408	5	5	5	5	5			
4	Side Frame (L)	-	3A3584-01	1	1	1	1	1			
4a	FT Screw	4×8, SS	7F32-0408	4	4	4	4	4			
5	Square Washer	Brass	433537-02	1	1	1	1	1		<u> </u>	
6	Ground Screw	-	433304-02	1	1	1	1	1			
7	Bushing	SR-7K-2	420472-02	1	1	1	1	1		<u> </u>	<u> </u>
8	Power Supply Cord	-	4A0520-01	1	1	1	1	1			_
9	Side Panel w/clip	-	4A4483G01	2	2	2	2	2		<u> </u>	\vdash
9a	FT Screw	4×8, SS	7F32-0408	11	11	11	11	11			_
10	Evaporator Case	-	2A3586G01	1	1	1	1	1		<u> </u>	
10a	FT Screw	4×8, SS	7F32-0408	4	4	4	4	4		<u> </u>	
11	Side Panel-(L1)	SS	2A3532G01	1	1	1	1	1		<u> </u>	\vdash
11a	FT Screw	4×8, SS	7F32-0408	1	1	1	1	1		<u> </u>	\vdash
12	Side Panel-(R1)	SS	2A3529G01	1	1	1	1	1		<u> </u>	_
12a	FT Screw	4×8, SS	7F32-0408	1	1	1	1	1		<u> </u>	_
13	Top Panel Assembly	-	3A3583G01	1	1	1	1	1		<u> </u>	\vdash
14	Rear Panel	-	2A4484-01	1	1	1	1	1		ļ	
14a	FT Screw	4×8, SS	7F32-0408	4	4	4	4	4	$oxed{oxed}$	<u> </u>	
15	Hook	-	4A3984-01	1	1	1	1	1		l	

Title: A	. Ice Dispenser Assembly Mo	del: DKM-500B V	VH								
							Requi	red N	umber		
Index No.	Description	Material or Model Number	Part Number	T-0	T-1 U-0	U-1 to V-5	V-6 to A-5	A-6			
16	Front Panel Suppport	-	4A4133G01	1	1	1	1	1			
17	Drain Pan Assembly	-	2A3522G01	1	1	1	1	1			
17a	FT Screw	4×8, SS	7F32-0408	4	4	4	4	4			
18	Drain Fitting	-	438729-01	1	1	1	1	1			
18a	Truss Head Screw	5×8, SS	7C32-0508	2	2	2	2	2			
19	Tee	PVC	4A0525-05	1	1	1	1	1			
20	Hose Clamp	2346 HC 1250	4A2017-03	4	4	4	4	4			
21	Vinyl Hose-Clear	L=195	4A0658L01	1	1	1	1	1			
22	Vinyl Hose-Clear	L=192	4A0658L01	1	1	1	1	1			
23	Vinyl Hose	L=550	7716-2025	1	1	1	1	1			
24	Hose Clamp	2338 HC 953	4A2017-01	2	2	2	2	2			
25	Front Insulation	-	2A0664G01	1	1	1	1	1			
26	Top Insulation	-	215730G01	1	1	1	1	1			
27	Wire Saddle	VWS4274-C	4A0338-03	5	5	5	5	5			
28	Evaporator Bracket	-	4A4068-01	1	1	-					
29	Bushing	OCB-875	428394-04	1	1	1	1	1			
30	Bushing	SB-1500-21	420470-06	1	1	1	1	1			
31	Rubber Gasket	L=50	4A0662L01	1	1	1	1	1			
32	Locking Hole Plug	-	4A0586-04		1	1	1	1			
33	Compressor Base Assembly	-	4A4835G01			1	1	1			

B. Refrigeration Unit


1/2

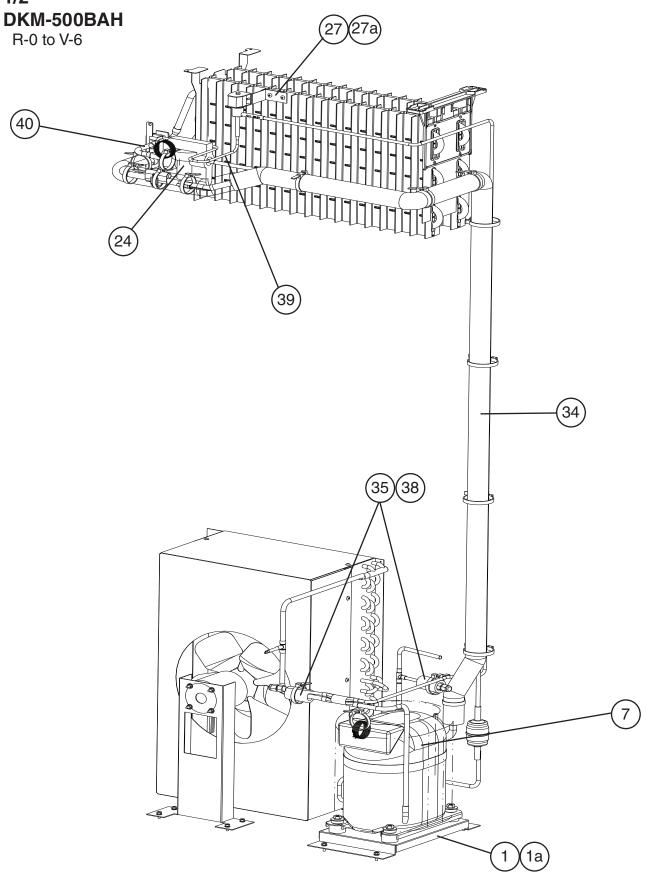


B. Refrigeration Unit

2/2

DKM-500BAH

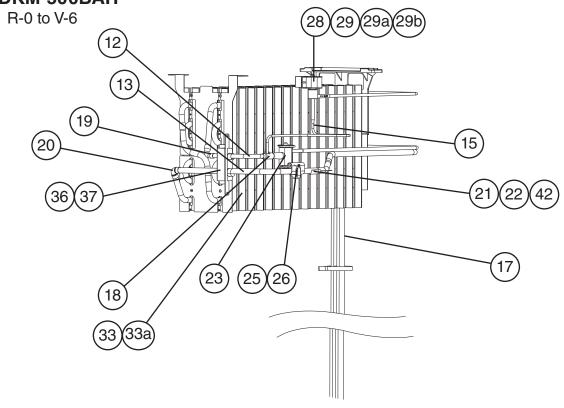


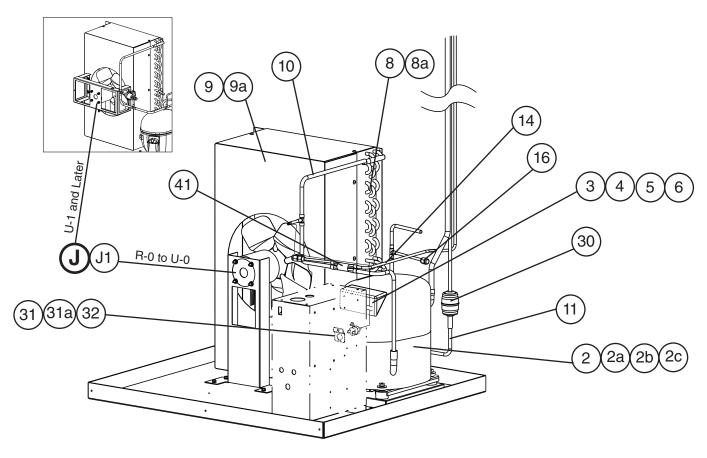

B. Refrigeration Unit 1/2

DKM-500BAH


V-7 to A-6

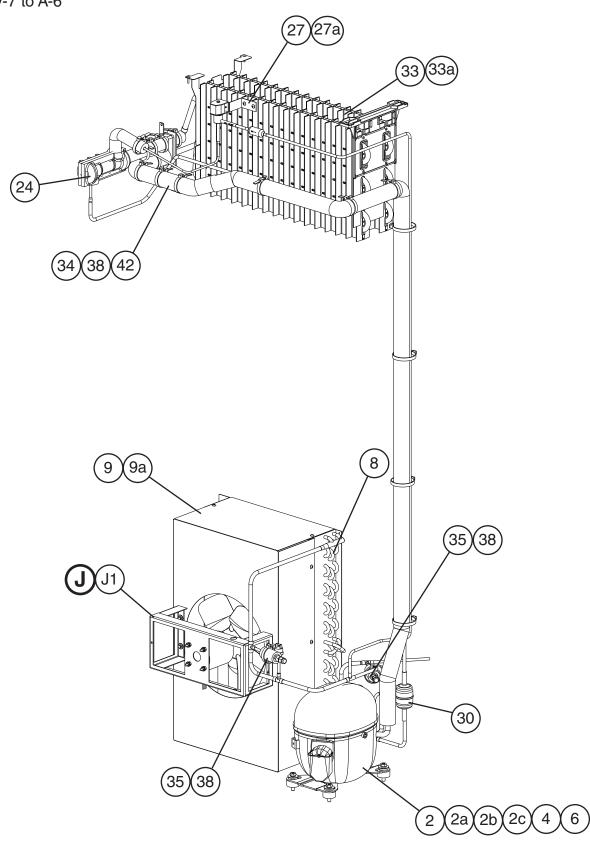

B. Refrigeration Unit

2/2

DKM-500BAH

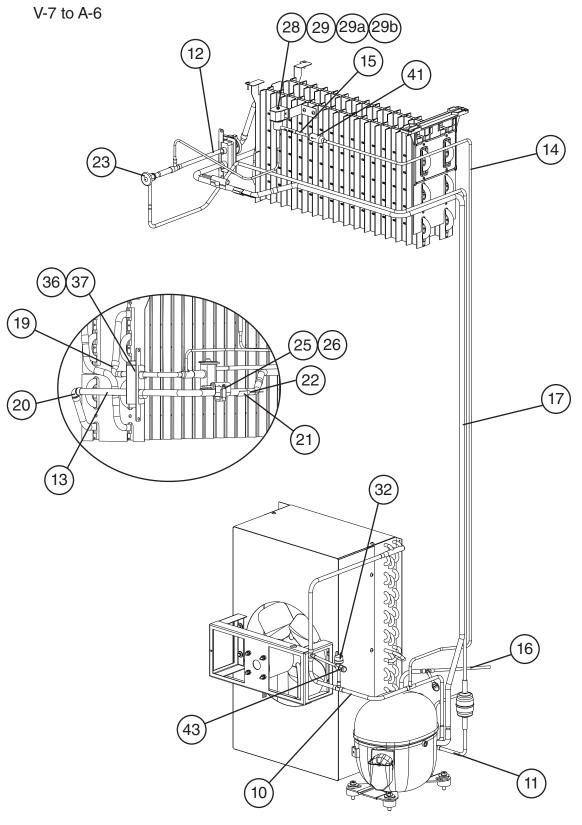

							Requ	ired N	umber		
				R-0	U-1	V-7					
Index		Material or		to	to	to					
No.	Description	Model Number	Part Number	U-0	V-6	A-6					<u> </u>
J	Fan Motor Assembly	-	3A3836A01	1	-	4			1		L
14	 		3A5412A01	4	1	1		-	-		L
J1	Hex Head Bolt w/Washer (LF)	6×12, SS	7B0230612	4	-	4		-	-		L
	<u> </u>	5×12, SS	7B0130512		4	4					
		Loo	440000001	4	1				1		_
1	Compressor Base Assembly	GS 0::10, CC	4A3823G01	1	-				-		H
1a 2	Hex Head Bolt (SW)	8×16, SS RS55C2E-	7B0230816	4	-	_			-		H
2	Compressor	CAA-219	4A1843-01	1	1						
		RST61C1E- CFA- 202	4A5158-01			1					
2a	Grommet	027-0073-00	434403-01	4	4	-					L
		-	4A2593-01			4					L
2b	Spacer	027-0072-02	434404-01	4	4	-					L
		-	4A2595-01			4		ļ	ļ		
2c	Bolt	8×45	437889-01	4	4	-					L
		8×40	437889-02			4			ļ		
3	Protector Holder	032-0186-00	4A1843F04	1	1	-			ļ		L
4	Terminal Cover	505-0312-01	4A1843F01	1	1	-			ļ		L
		-	4A5158F01			1			ļ		
5	Protector	071-0518-02	4A1877-01	1	1	-			ļ		
6	Spring Clip	006-0123-02	4A1843F02	1	1	-					L
		-	4A5158F02			1			ļ		L
7	Compressor Insulation	-	4A3992-01	1	1	-			ļ		
8	Condenser	-	1A1099-01	1	1	1					
8a	T2 Screw	4×8, SS	7P32-0408	2	2	-					L
9	Shroud	GS	2A3519-01	1	-						L
			2A3519-02		1	1					
9a	T2 Screw	4×8, SS	7P32-0408	8	8	8					L
10	Copper Tube (A)-High Side (includes item 41)	-	2A3525G01	1	1	-					
	Copper Tube (A)-High Side		2A6089G01			1					
11	Copper Tube (B)-High Side	-	3A3575G01	1	1	-					
			3A6066G01			1					
12	Copper Tube (A)-Low Side	-	3A3612-01	1	1	-					
			3A6086G01			1					
13	Copper Tube (B1)-Low Side	-	3A3613-01	1	1	1					
14	Copper Tube-HV	-	3A3573-01	1	1	-					L
			3A6065-01			1		<u> </u>	<u> </u>		
15	Copper Tube-HV2	-	4A3850-01	1	1	-					
	Copper Tube-HV3	L=50	4A4490-01			1					
16	Copper Tube-Access Valve		4A3825G01	1	1	-					L
	Copper Tube B-Access Valve		4A5159G02			1					<u> </u>
17	Heat Exchanger	-	2A3568G01	1	1	-					
			2A6091G01			1					L
18	Tee	-	436000-08	1	1	-					L
19	Elbow	I -	4A1059-01	1	1	1	1	1		1	ı


				l			Requi	red N	umber	'	
				R-0	U-1	V-7					Г
Index		Material or		to	to	to					l
No.	Description	Model Number	Part Number	U-0	V-6	A-6					
21	Thermistor Holder	COPPER	427430-01	1	1	1					Г
22	Thermistor	-	429006-06	1	1	1					Г
23	Expansion Valve	-	4A1870-01	1	1	-					Г
			4A4008-01			1					Г
24	Expansion Valve Cover	-	4A1168-01	1	1	-					Г
			3A0944-01			1					Г
25	Expansion Valve Bulb Holder	1/2"	3A0112-01	1	1	-					Γ
		3/8"	3A0107-01			1					Г
26	Clamp	-	443461-01	1	1	-					Γ
			443461-02			1					Г
27	Solenoid Bracket	GS	4A3852-01	1	1	1					Г
27a	FT Screw	4×8, SS	7F32-0408	3	3	4					Г
28	Hot Gas Valve Body	ATS-B7SHDU-2	4A3978-01	1	1	1					Г
29	Valve Coil	-	4A3277-01	1	1	1					Г
29a	Bolt	-	440353F01	1	1	1					Г
29b	FT Screw	4×8, SS	7F32-0408	2	2	-					Г
30	Drier	-	4A2666-01	1	1	1					Г
31	Pressure Switch Bracket	GS	434938-01	1	1	-					Г
31a	FT Screw	4×8	7P31-0408	1	1	-					Г
32	Pressure Switch	ACB-1UB09	433441-07	1	1	-					Г
		-	463180-04			1					Г
33	Evaporator Assembly	-	2A3562G01	1	1	1					Г
33a	T-2 Screw	4×16	4P32-0416	4	4	4					Г
34	Insulation Tube	L=1554	7762-2040	1	1	-					Г
		L=385]			1					Г
35	Insulation Tube	L=50	7762-2030	2	2	2					Г
36	Insulated Rubber Tube	-	4A1008G01	1	1	1					Г
37	Insulation Holder	SS	4A3902-01	1	1	1					Γ
38	Cable Tie	CV-150	8911-0150	14	14	14					Г
39	Insulation Tube	L=150mm	7762-0717	1	1	-					Γ
40	Insulation Tube	L=170mm	7762-1030	1	1	-					Γ
41	Strainer	-	4A0397-01	1	1	-					Γ
			441569-01			1			Ì		T
42	Thermistor Insulation	-	427441-01	1	1	1					T
		+	-						+	-	 +

B. Refrigeration Unit

1/2


DKM-500BWH

T-0 to A-6

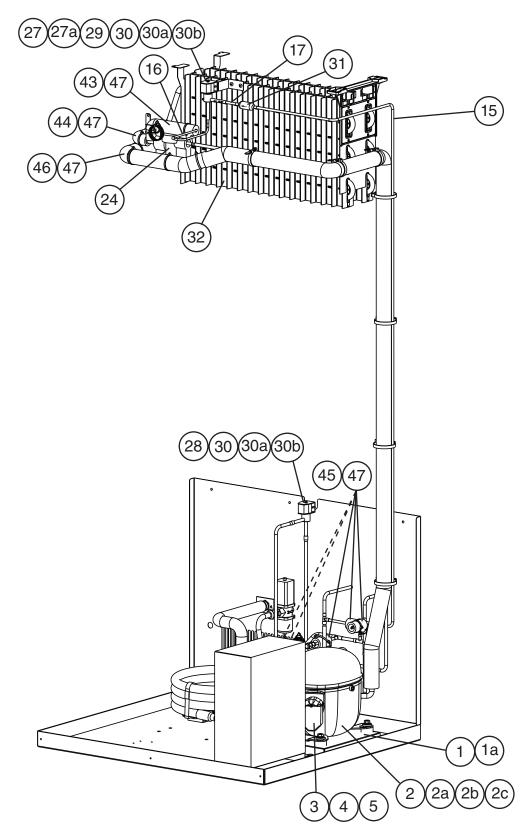

B. Refrigeration Unit 2/2 DKM-500BWH


T-0 to A-6

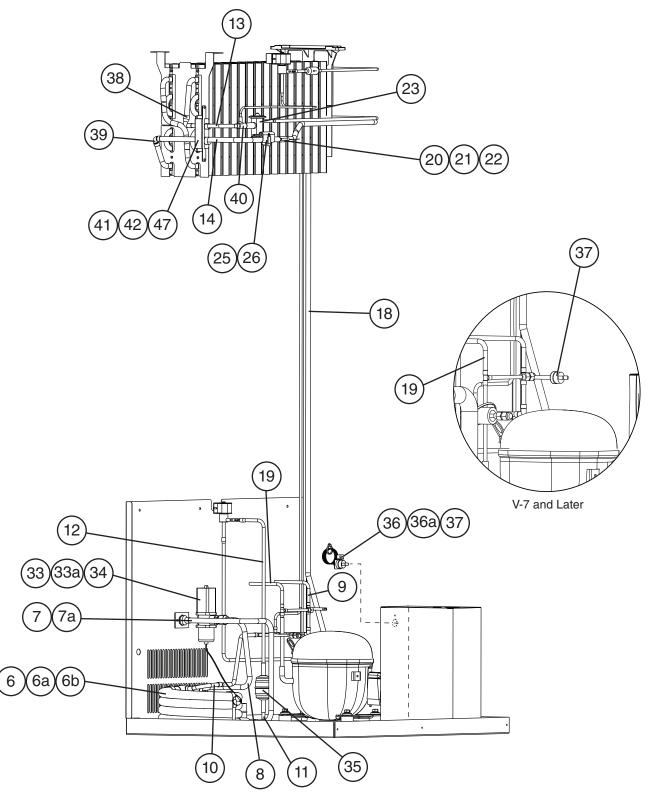

Title: B.	Refrigeration Unit Model: DK	M-500BWH									
							Requi	red N	umber		
				T-0	U-1	V-7					
Index		Material or		to	to	to					
No.	Description	Model Number		U-0	V-6	A-6	ļ			 	
1	Compressor Base Assembly	GS	4A3823G01	1	-						igsquare
1a	Hex Head Bolt w/Washer (LF)	8×16	7B0130816	4	-	4					\sqcup
2	Compressor	RST55C1E- CAA-202	4A4376-01	1	1	1					
2a	Grommet	027-C210-04	4A2593-01	4	4	4	<u> </u>				
2b	Spacer	028-0188-12	4A2595-01	4	4	4					
2c	Bolt Assembly	8×45	437889-01	4	4	4					
3	Terminal Cover	-	4A4376F01	1	1	1					
4	Spring Clip	-	4A4376F02	1	1	1					
5	Protector	-	4A2634-02	1	1	1					
6	Condenser	HS-0160	2A2359G01	1	1	1					
6a	Flat Washer	-	4A0655-03	2	2	2					
6b	Hex Head Bolt w/Washer (LF)	5×12, SS	7B0230512	2	2	2					
7	Copper Tube(A)-Water Circuit	-	3A1251G01	1	1	1					
7a	Truss Head Screw	4×8	7C31-0408	2	2	2					
8	Copper Tube (B)-Water Circuit	-	4A2681G01	1	1	1					
9	Copper Tube (A)-High Side	-	3A4797G01	1	1	-					
			3A4797G02			1					
10	Copper Tube (B)-High Side	-	2A4527G01	1	1	1					
11	Copper Tube (C)-High Side	-	4A4447G01	1	1	1					
12	Copper Tube (D)-High Side	-	4A4449-01	1	1	1					
13	Copper Tube (A)-Low Side	-	3A3612-01	1	1	1					
14	Copper Tube (B1)-Low Side	-	3A3613-01	1	1	1					
15	Copper Tube-HV	-	3A4741-01	1	1	1					
16	Copper Tube-HV2	-	4A3850-01	1	1	1					
17	Copper Tube-HV3	-	4A4490-01	1	1	1					
18	Heat Exchanger	-	2A4502G01	1	1	1					
19	Copper Tube-Access Valve	-	4A4488G01	1	1	-					
			4A5133G01			1					
20	Thermistor Holder	COPPER	427430-01	1	1	1			Ì		
21	Thermistor	-	429006-06	1	1	1					
22	Thermistor Insulation	-	427441-01	1	1	1					
23	Expansion Valve	-	4A1870-01	1	1	1					
24	Expansion Valve Cover	-	4A1168-01	1	1	1					
25	Expansion Valve Bulb Holder	1/2"	3A0112-01	1	1	1					
26	Clamp	-	443461-01	1	1	1					
27	Solenoid Bracket	GS	4A3852-01	1	1	1					
27a	FT Screw	4×8, SS	7F32-0408	2	2	2					
28	Liquid Line Valve Body	-	4A3276-01	1	1	1					
29	Hot Gas Valve Body	-	4A3978-01	1	1	1					
30	Valve Coil	-	4A3277-01	2	2	2					
30a	Bolt	-	440353F01	2	2	2					
30b	FT Screw	4×8, SS	7F32-0408	4	4	4					
31	Strainer	-	441569-01	1	1	1					П
32	Evaporator Assembly	-	2A3562G01	1	1	1					
33	Water Regulator	-	4A0911-06	1	1	1	Ì				
33a	Truss Head Screw	4×6	7C31-0406	2	2	2					
34	Male Connector	-	4A1087-01	1	1	1					

Title: B	Refrigeration Unit Model: DK	M-500BWH									
							Requi	red N	umber		
Index No.	Description	Material or Model Number	Part Number	T-0 to U-0	U-1 to V-6	V-7 to A-6					
35	Drier		4A2666-01	1	1	1					
36	Pressure Switch Bracket	GS	434938-01	1	1	-					
36a	FT Screw	4×8, SS	7F32-0408	1	1	-					
37	Pressure Switch	ACB-2UB04	433441-05	1	1	-					
		-	463180-05			1					
38	Elbow	-	4A1059-01	1	1	1					
39	Elbow	-	417395-03	1	1	1					
40	Tee	-	436000-08	1	1	1					
41	Insulated Rubber Tube	-	4A1008G01	1	1	1					
42	Insulation Holder	SS	4A3902-01	1	1	1					
43	Insulation Tube	L=180mm	7762-0717	1	1	-					
		L=150mm				1					
44	Insulation Tube	L=170mm	7762-1030	1	1	1					
45	Insulation Tube	L=50mm	7762-2030	5	5	5					
46	Insulation Tube	L=385mm	7762-2040	1	1	1					
47	Cable Tie	-	8911-0150	16	16	15					


C. Water Circuit DKM-500BAH, DKM-500BWH

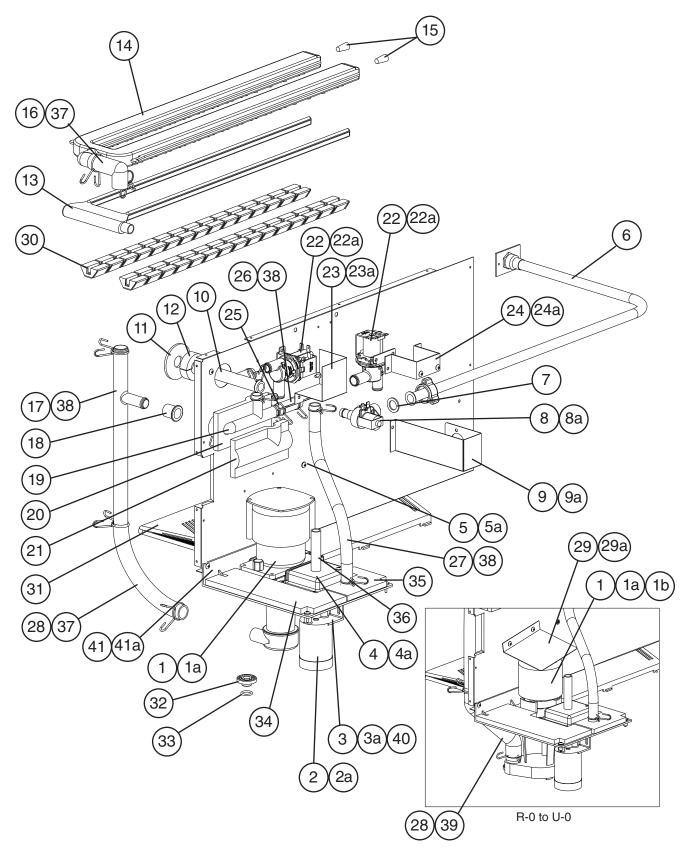

							Requi	red N	umber			
				R-0	S-1	U-1	V-7					Т
Index		Material or		to	to	to	to					
No.	Description	Model Number	Part Number	S-0	U-0	V-6	A-6		<u> </u>		<u> </u>	Ļ
1	Pump	-	2A2861-01	1	1	-			<u> </u>		<u> </u>	Ļ
			4A4259-01			1	1		<u> </u>		<u> </u>	L
1a	T2 Screw	4×16, SS	7P32-0416	4	4	-			<u> </u>			┞
	Thumbscrew	-	415949G11			1	1		<u> </u>		<u> </u>	┞
1b	Wellnut	-	4A1070-01	2	2	-			<u> </u>			Ļ
2	Float Switch	-	4A0886-03	1	-				<u> </u>			╀
			4A3624-03		1	1	1		<u> </u>		<u> </u>	╄
2a	T2 Screw	4×8, SS	7P32-0408	2	2	2	2		<u> </u>			┞
3	Float Switch Bracket	ABS	327757-01	1	1	1	1		<u> </u>			Ļ
3a	T2 Screw	DKM-500BAH 4×12, SS	7P32-0412	2	2	2	2					L
		DKM-500BWH 4×16, SS	7P32-0416	2	2	2	2					
4	Float Switch Cover	-	3A0665-01	1	1	1	1					Ĺ
4a	T2 Screw	4×12, SS	7P32-0412	3	3	3	3					Ĺ
5	T2 Screw (pump ground)	4×8	7P31-0408	1	1	-						
	FT Screw (pump ground)	4×8	7F32-0408			1	1					Г
5a	Tooth Washer (pump ground)	M4, ZN	7R21-0400	1	1	1	1					Г
6	Water Supply Pipe	-	3A3589G01	1	1	1	1					Γ
7	Rubber Gasket	-	413854-03	1	1	1	1					Γ
8	Inlet Water Valve	DKM-500BAH	3U0150-01	1	1	1	-					Г
			4A5251-05				1					T
		DKM-500BWH	3U0111-04		1	1	1					T
8a	Truss Head Screw	4×8, SS	7C32-0408	2	2	2	2					T
9	Water Valve Bracket	GS	4A3900-01	1	1	1	1					Г
9a	FT Screw	4×8, SS	7F32-0408	2	2	2	2					Г
10	Water Supply Tee	-	4A1006-01	1	1	1	1					Г
11	Flange	-	439267-01	1	1	1	1					T
12	Insulation (E)	-	4A0392-01	1	1	1	1					Г
13	Water Supply Tube	-	2A0079-01	1	1	1	1					T
14	Spray Tube	-	1A0260-02	1	1	1	1					T
15	Plug	Santoprene	4A0176-01	2	2	2	2					Г
16	Elbow	-	4A0393-01	1	1	1	1					Г
17	Connecting Pipe	-	3A1335-01	1	1	1	1					Г
18	Rubber Ring	-	4A1004-01	1	1	1	1					Т
19	Bypass Hose	-	4A1005-01	1	1	1	1					Γ
20	Insulation (A1) Bypass Hose	-	4A1259-01	1	1	1	1		İ			T
21	Insulation (A2) Bypass Hose	-	4A1260-01	1	1	1	1					Г
22	Solenoid Valve (wash and drain)	-	4A3722-01	2	2	2	2					Γ
22a	Truss Head Screw	4×8, SS	7C32-0408	4	4	4	4					T
23	Solenoid Cover	GS	4A0996-01	1	1	1	1		İ	İ		T
23a	FT Screw	4×8, SS	7F32-0408	2	2	2	2		<u> </u>			十
24	WV Cover	GS	4A4219-01	1	1	1	1		†			\top
24a	FT Screw	4×8, SS	7F32-0408	2	2	2	2					\vdash
25	Joint Pipe	,	439329-01	1	1	1	1		+	 	 	\vdash

Title: C	Water Circuit Model: DKM-5	00BAH, DKM-50	0BWH								
							Requi	red N	umber		
Index No.	Description	Material or Model Number	Part Number	R-0 to S-0	S-1 to U-0	U-1 to V-6	V-7 to A-6				
26	Vinyl Hose	L=55	7716-1519	1	1	1	1		İ		
27	Vinyl Hose	L=315	7716-1519	1	1	1	1		İ		
28	Pump Hose	-	4A1007-01	1	1	-					
	Vinyl Hose	L=230	7716-2025			1	1				
29	Barrier-Pump	GS	4A3923-01	1	1	-					
29a	FT Screw	4×8, SS	7F32-0408	2	2	-					
30	Spray Guide (A)	-	208586-01	6	6	6	6				
31	Cube Guide (A)	-	2A0660-01	1	1	1	1				
32	Drain Plug	-	309246-01	1	1	1	1				
33	"O" Ring	-	7611-P015	1	1	1	1				
34	Pump Bracket Insulation (A)	-	4A1052-01	1	1	-					
			4A4783-01			1	1				
35	Pump Bracket Insulation (B)	-	4A1053-01	1	1	1	1				
36	Vinyl Hose	L=150	7716-1216	1	1	1	1				
37	Hose Clamp	25 mm, SS	427443-03	3	3	4	4				
38	Hose Clamp	18 mm, SS	427443-05	10	10	10	10				
39	Hose Clamp	27 mm, SS	427443-08	1	1	-					
40	Float Switch Spacer	DKM-500BWH	4A0650-01		1	1	1				
41	Pump Bracket	-	2A4920G01			1	1				
41a	T2 Screw	4×16, SS	7P32-0416			4	4				


D. Control Box Assembly DKM-500BAH

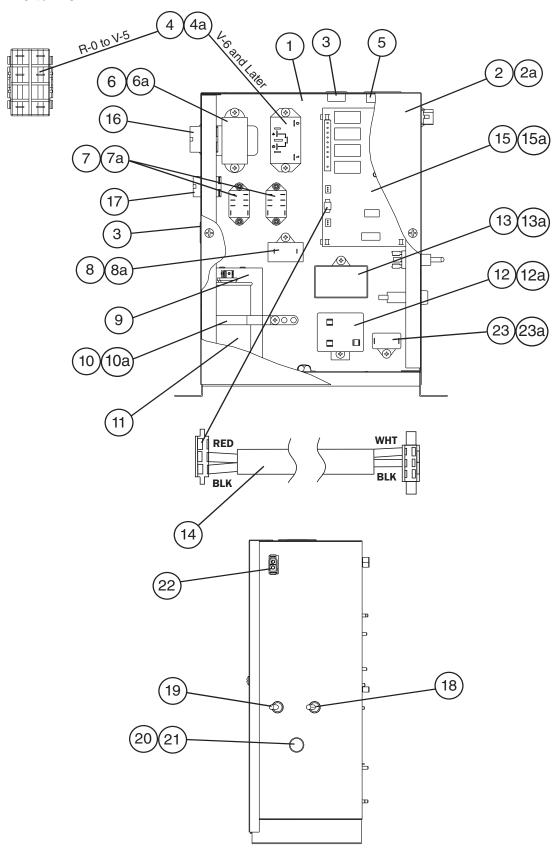

							Requi	red Ni	ımher			_
				R-0	T-0	U-1	, iequi	V-7	2111061			\Box
Index		Material or		to	to	to		to				
No.	Description	Model Number	Part Number	S-1	U-0	V-5	V-6	A-6				
1	Control Box	GS	3A3817G01	1	1	1	-					Г
			3A6081G02				1	1				Г
2	Control Box Cover	GS	3A3660-01	1	1	1	1	1				Г
2a	Truss Head Screw	4×8	7C31-0408	2	2	2	2	2				Г
3	Bushing	OCB-875	428394-04	2	2	2	2	2				Г
4	Magnetic Contactor	VC20	428393-01	1	1	1	-					T
	Compressor Relay	-	4A3140-01				1	1				Г
4a	T2 Screw	4×8	7P31-0408	2	2	2	2	2				T
5	Bushing	SB-1500-21	420470-06	1	1	1	1	1				一
6	Control Transformer	26D285H	3A0172-01	1	1	1	1	1				T
 6a	T2 Screw	4×8	7P31-0408	2	2	2	2	2				H
7	Relay (control and ice	LY2F, AC120V	406132-07	2	2	2	2	2				H
-	dispense)			-	-	_	-	-				
7a	Tapping Screw	3×8	431415-01	4	4	4	4	4				Г
8	Fan Motor Capacitor	5MFD, 250VAC	443192-02	1	1	1	1	1				Γ
8a	T2 Screw	4×8	7P31-0408	1	1	1	1	1				\vdash
9	Start Capacitor	189-227MFD,	3A0076-12	1	1	1	1	-				\vdash
9	Start Capacitor	330VAC										L
		243-292MFD, 250VAC	3A0076-21					1				
10	Strap	GS	4A2262-03	1	1	1	1	1				Г
10a	T2 Screw	4×8	7P31-0408	1	1	1	1	1				Г
11	Run Capacitor	25MFD, 370VAC	3A2005-06	1	1	1	1	-				Г
		40MFD, 440VAC	3A2005-07					1				Г
12	Start Relay (starter)	3ARR3CT24S5	4A1107-13	1	1	1	1	-				Г
		3ARR3KC3P5	4A1107-20					1				Г
12a	T2 Screw	4×8	7P31-0408	1	1	1	1	1				十
13	Gear Motor Capacitor	24MFD, 250VAC		1	-	 	 		<u> </u>			┢
.0	acai meter capacitor	20MFD, 250VAC			1	1	1	1	<u> </u>			十
13a	T2 Screw	4×8	7P31-0408	1	1	1	1	1				\vdash
14	Bin Control Wire Harness	L=1800	4A2200G03	1	1	-	⊢∸				 	\vdash
	Bill Control Wille Halliess	L=1800	4A2200G03	- '-	├	1	1	1				\vdash
15	Control Board	- 1220	2A1410-01	1	1	1	1	1				\vdash
15a	Board Support	CBLS37-M	4A0336-03	4	4	4	4	4				\vdash
16	3P Plug Housing	3191-3P	412832-06	1	 	 	┝▔	 				\vdash
10	4P Plug Housing	3191-4P Red	412832-00	- '-	1	1	1	_		-		\vdash
	4P Plug Housing	3191-4P Neu	412832-05		- '-	- '-	- '-	1				\vdash
17	4P Plug Housing	3191-4P	412832-05	1	1	1	1	_ '				\vdash
17	6P Plug Housing	3191-4P	412832-03	- '-	 	-'-	 	1				\vdash
18	Service Toggle Switch	8966K211	4A0985-01	1	1	1	1	1				\vdash
	Control Toggle Switch				1	1	1		<u> </u>			\vdash
19 20	Fuse	8966K84 AGC-10, 250V,	443119-01 4A0893-07	3	3	3	3	3				\vdash
		10A										L
21	Fuse Holder	HTB82I	4A3449-01	1	1	1	1	1				Ĺ
22	Plug Housing	03-09-2021	4A4002-01	1	1	1	1	1				Ĺ
23	Pump Motor Capacitor	2.5MFD, 250VAC	4A2128-05			1	1	1				
23a	T2 Screw	4×8	7P31-0408			1	1	1				Γ


D. Control Box Assembly DKM-500BWH

T-0 to A-6

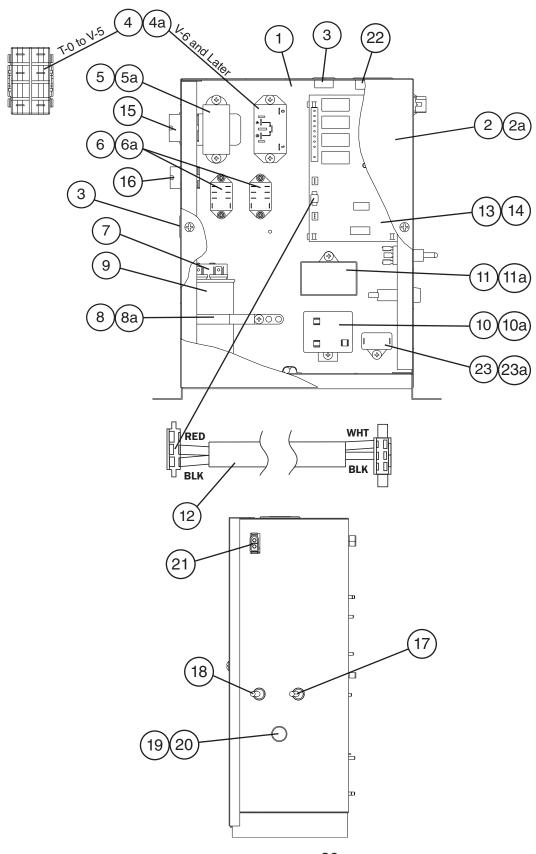


							Requi	red N	umber		
				T-0	U-1		广				
Index	Description	Material or	Dowt Niveshou	to U-0	to V-5	V-6 V-7	A-5				
No.	Description Control Box	Model Number GS	3A3817G01	1	v-5 1	V-7	A-6				H
ı	Control Box	GS		'	'	- 4					H
			3A6226G01 3A6081G02			1	1				⊬
2	Control Box Cover	GS	3A3660-01	1	1	1	1				⊢
 2a	Truss Head Screw	4×8	7C31-0408	2	2	2	2				┝
3	Bushing	OCB-875	428394-04	2	2	2	2				┢
4	Magnetic Contactor	ОСБ-675	428393-04	1	1						⊬
4	Compressor Relay	-	4A3140-01			1	1				⊬
10	T2 Screw	4.40			2						H
4a	Control Transformer	4×8	7P31-0408	2		2	2				\vdash
5		4.40	3A0172-01	1	1	1	1				\vdash
5a	T2 Screw	4×8	7P31-0408	2	2	2	2				\vdash
6	Relay (control and ice dispense)	-	406132-07	2	2	2	2				
6a	Tapping Screw	3×8	431415-01	4	4	4	4				
7	Start Capacitor	243-292MFD, 165V	3A0076-20	1	1	1	1				
8	Strap	GS	4A2262-03	1	1	1	1				Г
8a	T2 Screw	4×8	7P31-0408	1	1	1	1				Г
9	Run Capacitor	35MFD, 440VAC	3A2005-12	1	1	1	1				Г
10	Start Relay (starter)	-	4A1107-11	1	1	1	1				Г
10a	T2 Screw	4×8	7P31-0408	1	1	1	1				Г
11	Gear Motor Capacitor	20MFD, 250VAC	4A4319-02	1	1	1	1				
11a	T2 Screw	4×8	7P31-0408	1	1	1	1				Г
12	Bin Control Wire Harness	L=1800mm	4A2200G03	1	-						Г
		L=1220	4A2200G01		1	1	1				Г
13	Control Board	-	2A1410-01	1	1	1	1				
14	Board Support	CBLS37-M	4A0336-03	4	4	4	4				
15	Plug Housing 4P	3191-04P RED	412832-11	1	1	1	1				
16	Plug Housing 4P	3191-04-P	412832-05	1	1	1	-				
	Plug Housing 6P	-	412832-03				1				Г
17	Service Toggle Switch	-	4A0985-01	1	1	1	1				
18	Control Toggle Switch	-	443119-01	1	1	1	1				
19	Fuse	AGC-10, 250VAC, 10A	4A0893-07	3	3	3	3				
20	Fuse Holder	-	4A3449-01	1	1	1	1				Г
21	Plug Housing	-	4A4002-01	1	1	1	1				Г
22	Bushing	SB-1500-21	420470-06	1	1	1	1				Г
23	Pump Motor Capacitor	2.5MFD, 250VAC	4A2128-05		1	1	1				Г
23a	T2 Screw	4×8	7P31-0408		1	1	1				Г

E. Bin Assembly DKM-500BAH, DKM-500BWH

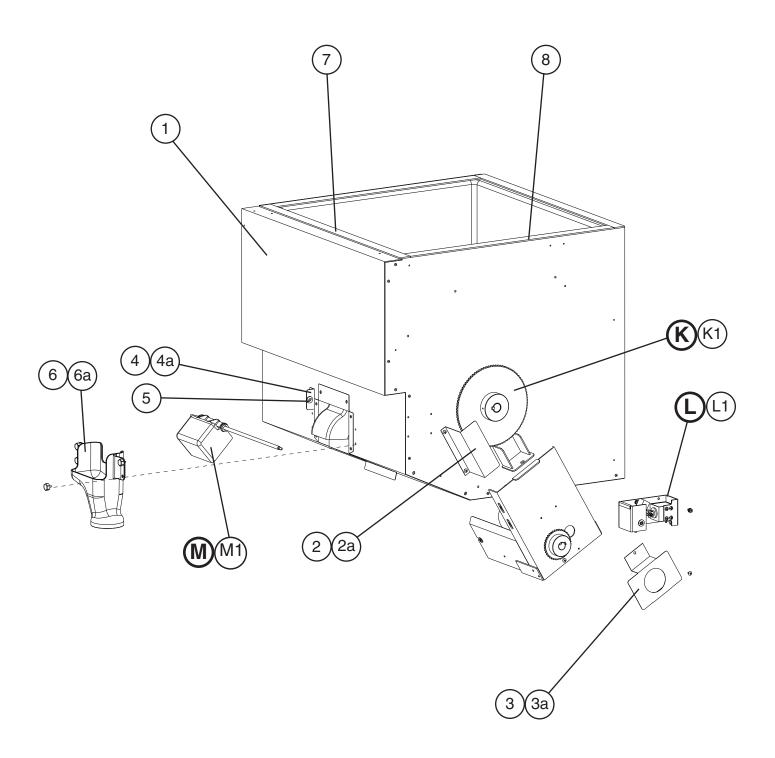


Title: E.	Bin Assembly Model: DKM-5	00BAH, DKM-50	00BWH		1				1		
							Requi	ired N	umbei	r	
Index No.	Description	Material or Model Number	Part Number	R-0 to S-1	T-0 to A-5	A-6					
K	Mechanism Assembly	-	1A0109A02	1	-						
			1A0109A04		1	-					
			1A1964A01			1					
K1	See E1 in A. Ice Dispenser Assemechanism assembly to the bin		ecuring the								
L	Solenoid Assembly	-	2A0585A01	1	1	1					
L1	Hex Head Bolt w/Washer (LF)	4×10, SS	7B0230410	4	4	4					
М	Shutter Assembly	-	328650A01	1	1	1					
M1	Snap Pin	SSP-6, SS	715S-0006	1	1	1					
1	Bin Body	-	106184G02	1	1	1					
2	Chain Cover (A)	GS	438282-01	1	1	1					
2a	T2 Screw	4×8, SS	7P32-0408	2	2	2					
3	Chain Cover (B)	GS	438283-01	1	1	1					
За	FT Screw	4×8, SS	7F32-0408	1	1	1					
4	Shutter Collar Bracket	GS	439399-01	1	1	1					
4a	T2 Screw	4×8, SS	7P32-0408	2	2	2					
5	Shutter Collar	-	435533-01	1	1	1					
6	Spout	-	2A3528-01	1	1	1					
6a	Thumbscrew	ABS, SS	415949G08	4	4	4					
7	Gasket	L=650	4A0808L01	2	2	2					
8	Gasket	L=580	4A0808L01	2	2	2					

F. Bin Cover Assembly DKM-500BAH, DKM-500BWH

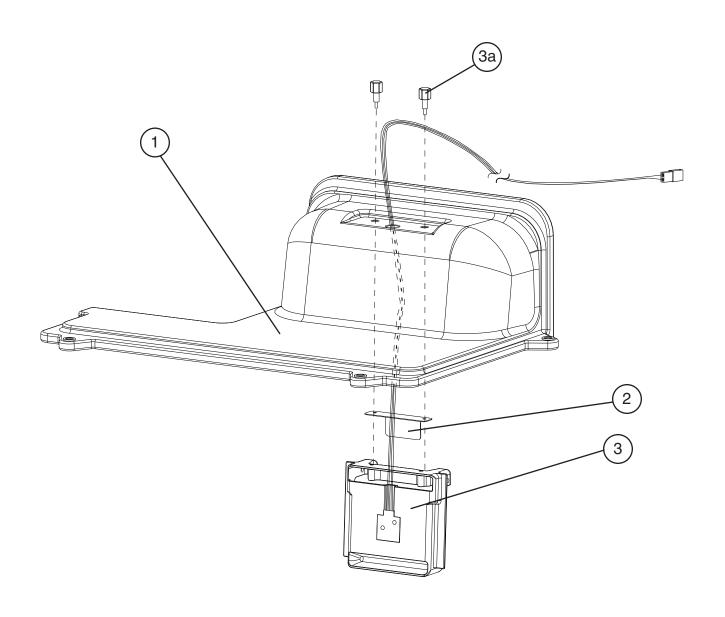


Title: F.	Bin Cover Assembly Model:	DKM-500BAH, D	KM-500BWH							
						Requi	red N	umber		
				R-0	U-1					
Index		Material or		to	to					
No.	Description	Model Number	Part Number	U-0	A-6					
1	Bin Cap	-	1A1142-01	1	1					
2	Switch Bracket	SS	4A3976-01	1	1					
3	Bin Control Switch	-	464574-01	1	-					
			2A4393G01		1					
3a	Thumbscrew	ABS, SS	434168G02	2	2					

G. Front Panel Assembly DKM-500BAH, DKM-500BWH

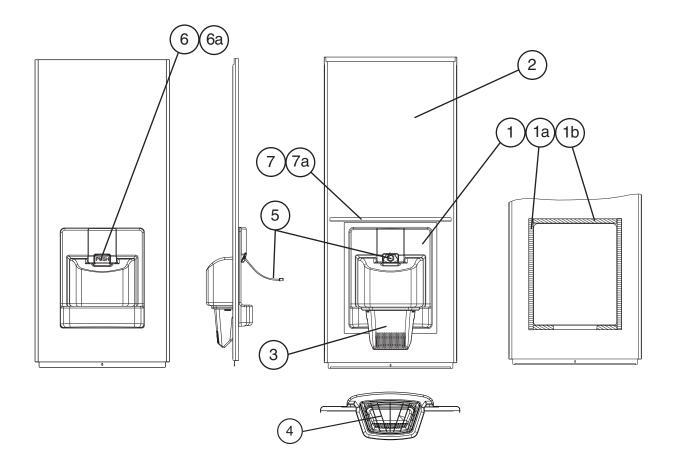


Title: G	. Front Panel Assembly Model	: DKM-500BAH	, DKM-500BW	Ή						
						Requi	red N	umber		
				R-0						
Index		Material or		to						
No.	Description	Model Number	Part Number	A-6						
1	Front Panel (A)	-	1A1077-01	1						
1a	Foam Tape	L=640	4A2460L01	2						
1b	Foam Tape	L=484	4A2460L01	2						
2	Front Panel (B)	SS	1A1076-01	1						
3	Chute	-	2A3448-01	1						
4	Grill	-	3A3485G01	1						
5	Push Switch	-	460111-01	1						
6	Push Switch Button	-	3A3871-01	1						
6a	T2 Screw	4×20, SS	7P32-0420	1						
7	Front Panel Brace	SS	4A4086-01	1						
7a	Foam Tape	L=700	4A2460L01	1						

H. Label Location DKM-500BAH, DKM-500BWH

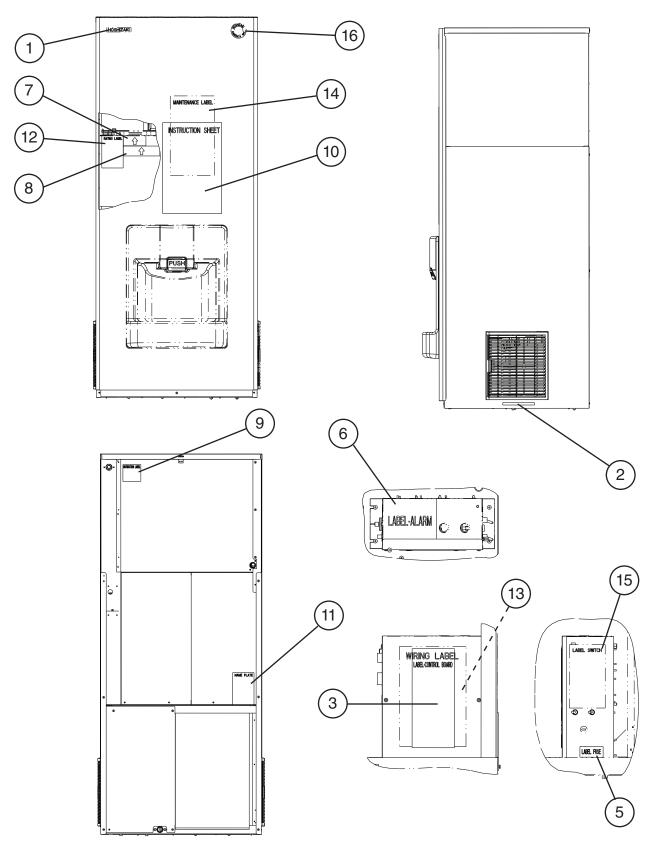


Title: H.	Label Location Model: DI	KM-500BAH, DKM-	500BWH								
							Requi	red N	umber		
				R-0	T-0		V-7				
Index		Material or		to	to		to				
No.	Description	Model Number	Part Number	S-1	V-5	V-6	A-6				
1	Emblem	-	4A0560-01	1	1	1	1				
2	Air Filter Label	DKM-500BAH	426177-01	2	2	2	2				
3	Control Board Label	-	3A2220-01	1	1	1	1				
4	R404A Label	-	4A0960-01	1	1	1	-				
5	Fuse Label	-	4A2817-01	1	1	1	-				
			4A4829-01				1				
6	Alarm Label	-	4A3517-01	1	1	1	-				
			4A4737-01				1				
7	Caution Label (F)	-	439146-01	1	1	1	-				
	Warning Label (F)		4A4767-01				1				
8	Caution Label (K)	-	439150-01	1	1	1	-				
	Warning Label (K)		4A4736-01				1				
9	Instruction Label	-	444575-01	1	1	1	1		İ		
10	Instruction Sheet	-	2A3770-01	1	-						
11	Nameplate	DKM-500BAH	3A3879-01	1	1	1	-		İ		İ
			3A6082-01				1		İ		ĺ
		DKM-500BWH	3A3879-02		1	1	1				
12	Rating Label	DKM-500BAH	3A3880-01	1	1	1	-				
			3A6083-01				1				
		DKM-500BWH	3A3880-02		1	1	1				ĺ
13	Wiring Label	DKM-500BAH	3A3881-01	1	-						
			3A4806-01		1	1	-				
			3A6145-01				1				
		DKM-500BWH	3A4795-01		1	-					
			3A6146-01			1	1				
14	Maintenance Label	-	2A3769-01	1	1	1	1				
15	Switch Label	-	4A3991-01	1	1	1	1		İ		
16	Penguin Label-HA (L)	-	4A0526-02	1	1	1	1		Ì		

J. Fan Motor Assembly DKM-500BAH

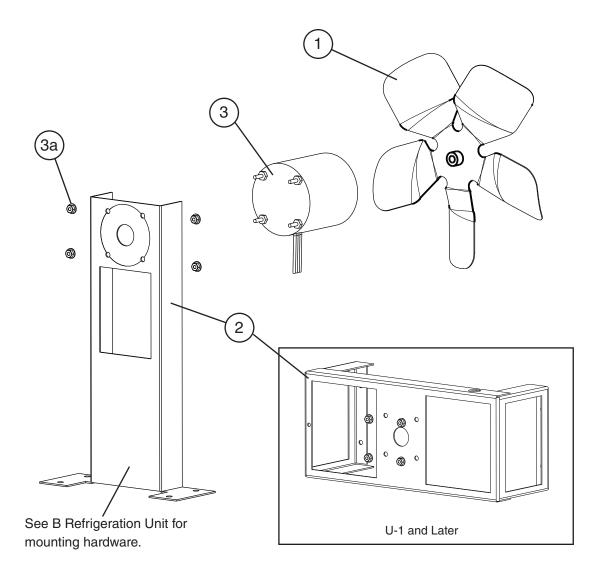


Ti	tle: J. Fan Motor Assembly Mo	del: DKM-500B	AH							
						Requi	red N	umber		
				R-0	U-1					
Index		Material or		to	to					
No.	Description	Model Number	Part Number	U-0	A-6					
1	Fan Blade	AD10W32	444898-01	1	1					
2	Fan Motor Bracket	GS	2A3741-01	1	-					
			3A5406-01		1					
3	Fan Motor	5KCP84DFK148S	4A3158-01	1	1					
За	Self-locking Nut	No. 8-32	7N21I0832	4	4					

K. Mechanism Assembly DKM-500BAH, DKM-500BWH

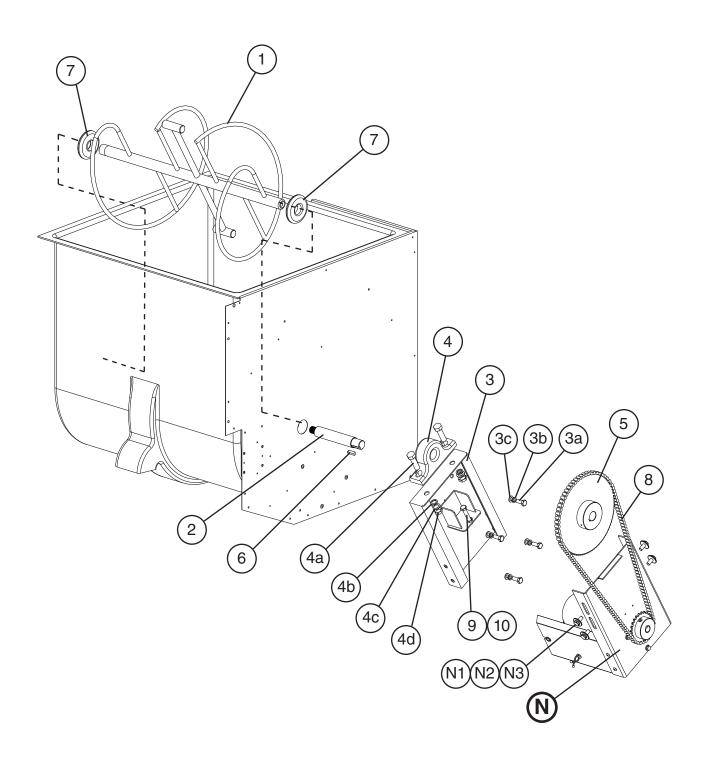


							Requ	red N	umber		
				R-0	T-0						
Index		Material or		to	to						
No.	Description	Model Number		S-1	A-5	A-6					L
N	Gear Motor Assembly	-	2A0443A03	1	-						
			2A0443A06		1	-					
			2A5461A02			1					
N1	Hex Head Bolt	8×20	7B01-0820	4	4	-					
	Hex Head Bolt wWasher (LF)		7B0130820			4					
N2	Split Lock Washer	M8	7L21-0800	4	4	-					
N3	Flat Washer	M8	7W21-0800	4	4	-					Г
1	Agitator	SS	212969G01	1	1	1					
2	Drive Shaft	SS	435551-01	1	1	1					
3	Gear Motor Bracket (A)	GS	2A0450G01	1	1	1					
3a	Hex Head Bolt	8×20	7B01-0820	4	4	4					
3b	Split Lock Washer	M8	7L21-0800	4	4	4					
3с	Flat Washer	M8	7W21-0800	4	4	4					
4	Pillow Block Bearing	UCP-205G00	435553-02	1	1	1					
4a	Hex Head Bolt	12×40	7B01-1240	2	2	2					
4b	Flat Washer	M12	7W21-1200	2	2	2					
4c	Split Lock Washer	M12	7L21-1200	2	2	2					Г
4d	Hex Nut	M12	7N11-1200	2	2	2				ĺ	
5	Sprocket (B)	No. 35×65T (w/ 6×18 set screw)	435554-01	1	1	1					
6	Key	6×6×22	437265-01	1	1	1					
7	Seal (B)	EP-21	435558-01	2	2	2					
8	Chain	RK35, 130 pitches	435797-01	1	1	1					
9	Hex Head Bolt	8×45	7B01-0845	1	1	1					
10	Hex Nut	M8	7N11-0800	1	1	1					

L. Solenoid Assembly DKM-500BAH, DKM-500BWH

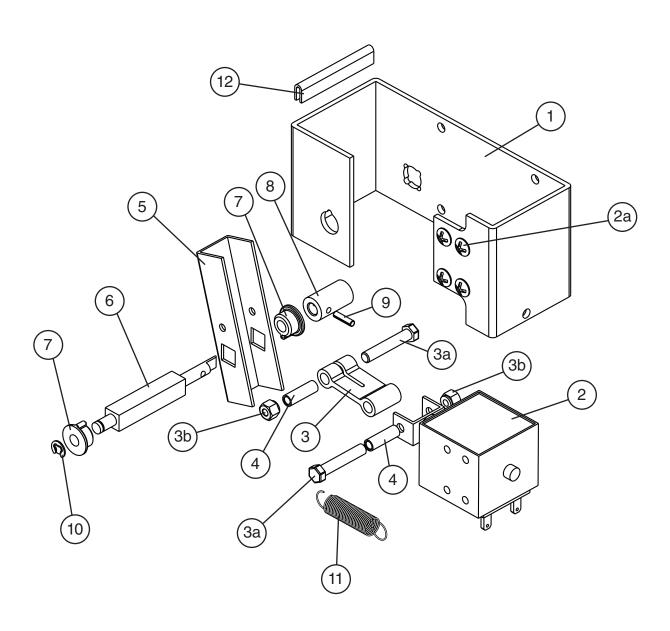


Title: L.	Solenoid Assembly Model: D	KM-500BAH, DK	(M-500BWH							
						Requi	red N	umber		
Index No.	Description	Material or Model Number	Part Number	R-0 to S-0	S-1 to A-6					
1	Solenoid Bracket	GS	3A0533-01	1	1					
2	Solenoid	-	4A0856-01	1	1					
2a	Truss Head Screw	4×8, SS	7C32-0408	4	4					
3	Link	-	432232-01	1	1					
3a	Hex Head Bolt	4×30, SS	7B02-0430	2	2					
3b	Hex Nut	M4, SS	7N12-0400	2	-					
	Self-Locking Nut	M4, SS	7N22-0400		2					
4	Collar (D)	SS	432471-01	2	2					
5	Link-Solenoid	SS	439397-01	1	1					
6	Shaft	-	435532-01	1	1					
7	Collar-Shutter	-	435533-01	2	2					
8	Connector	-	435534-01	1	1					
9	Spring Pin	3×12, SS	712S-0312	1	1					
10	"E" Ring	SS, 5	721S-0005	1	1					
11	Spring	-	432878-01	1	1					
12	Rubber Gasket	CH-35, L=50	4A0662L01	1	1					

M. Shutter Assembly DKM-500BAH, DKM-500BWH R-0 to A-6

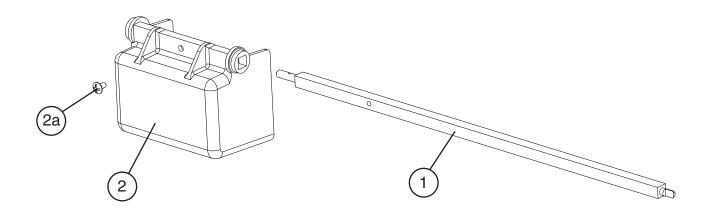

Title: M	. Shutter Assembly Model: DK	M-500BAH, DKI	W-500BWH							
						Requi	red N	umber		
				R-0						
Index		Material or		to						
No.	Description	Model Number	Part Number	A-6						
1	Shaft-Shutter	SS	328648-01	1						
2	Shutter (A)	POLYOXY-	215459-01	1						
		METHYLENE								
2a	Truss Head Screw	4×8, SS	7C32-0408	1						

N. Gear Motor Assembly DKM-500BAH, DKM-500BWH

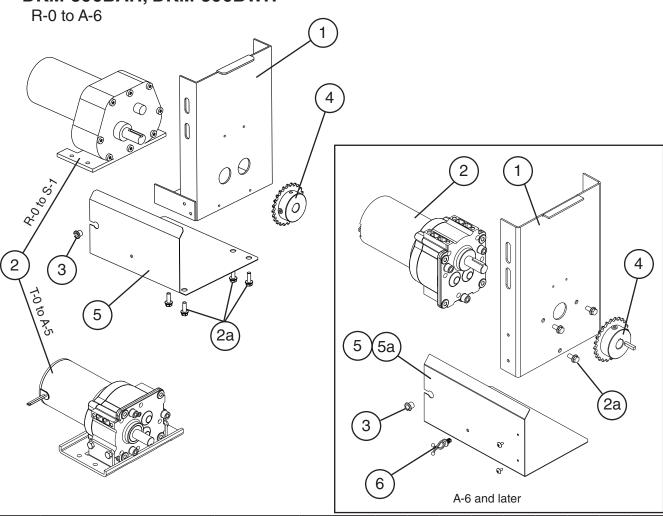

Title: N	I. Gear Motor Assembly Mode	: DKM-500BAH,	DKM-500BW	Н							
							Requ	red N	umber		
Index No.	Description	Material or Model Number	Part Number	R-0 to S-1	T-0 to A-5	A-6					
1	Gear Motor Bracket	GS	2A0123-01	1	1	-					
			2A5462-01			1					
2	Gear Motor	-	4A0183-01	1	-						
			4A4264-01		1	-					
			4A5055-01			1					
2a	Bolt	6×20	4A1989-01	4	4	-					
	Hex Head Bolt-Serrated	-	4A5135-01			3					
3	Bushing	OCB-500	428394-02	1	1						
4	Sprocket (A)	(w/ 5×14 set screw)	435557-01	1	-						
		(w/ 5×8 set screw)	4A4413-01		1						
5	Barrier (C)	GS	3A3588-01	1	1	-					
	Barrier (B)]	3A5807-01			1					
5a	T2 Screw	4×8	7P31-0408			2					
6	Wire Tie		4A1223-01			1					

P. Accessories and Packaging DKM-500BAH, DKM-500BWH R-0 to A-6

					Requ	ired N	umber		
				R-0					
Index		Material or		to					
No.	Description	Model Number	Part Number	A-6					
1	Instruction Manual	PAPER	91A4QA10C	1					
2	Adjustable Leg w/5" Toe (Blk)	-	4A2526-01	4					
3	Leg Protector	PE	3A0134-01	4					